


First draw the holes location on the panels, then find a place to drill a small hole, then cut the round or square holes by circular saws, steps as bellows:





2002



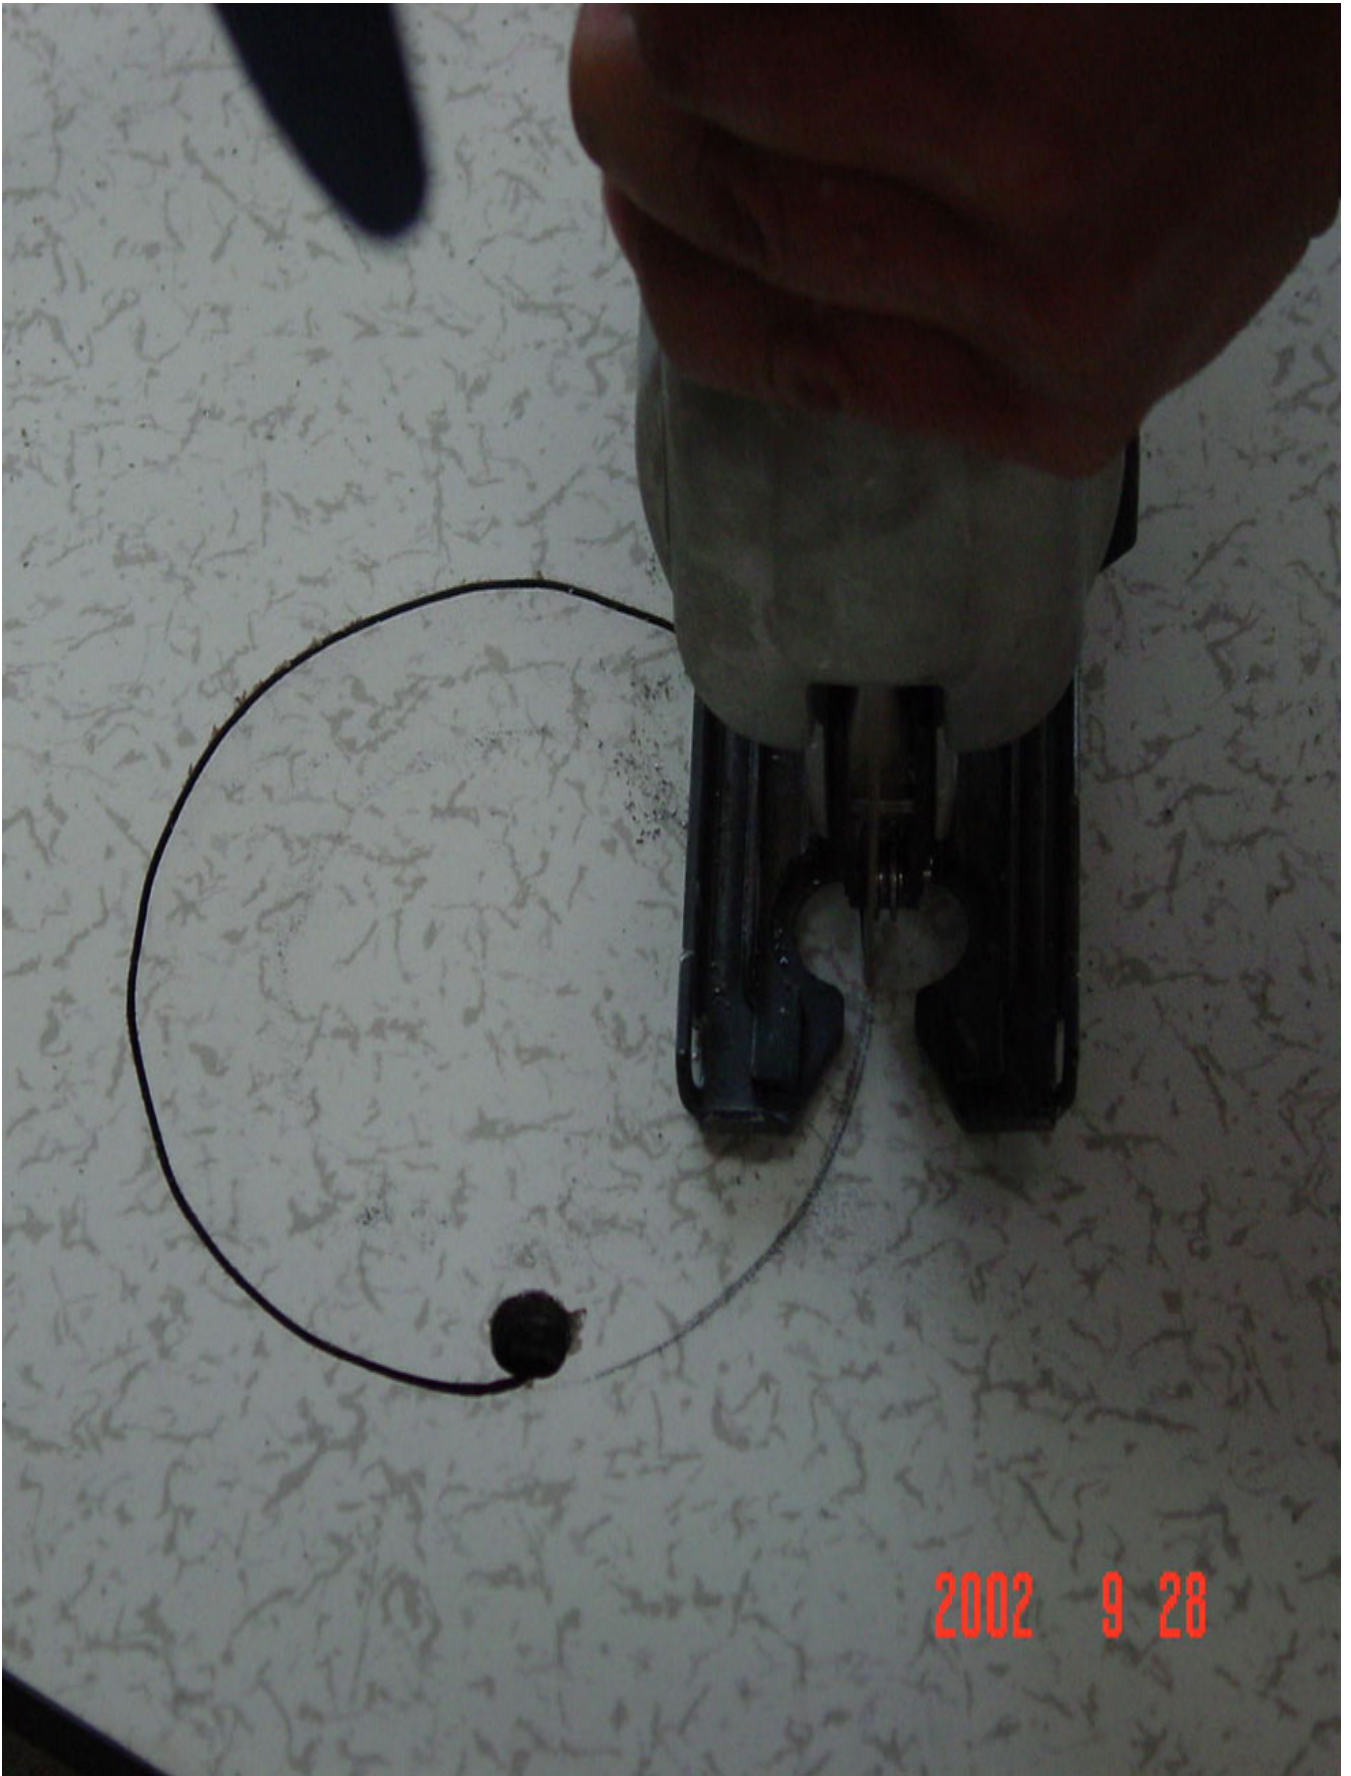

2002 9 28

